



# **ZoomCam 100**

## **Quick Start Guide**



The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor.

No warranty of representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organisation of such changes.

In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

© 2003 Copyright. All rights reserved

IBM, PC/AT and PS/2 are registered trademarks of International Business Machines Corporation.


Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation in the United States of America and other countries.

Photo Express is the registered trademark of Ulead Systems, Inc in the United States of America and other countries.

All other trademarks are trademarks of their respective holders.

Congratulations on purchasing ZoomCam 100. This manual tells you how to install and use the camera.

## Getting to Know the Camera

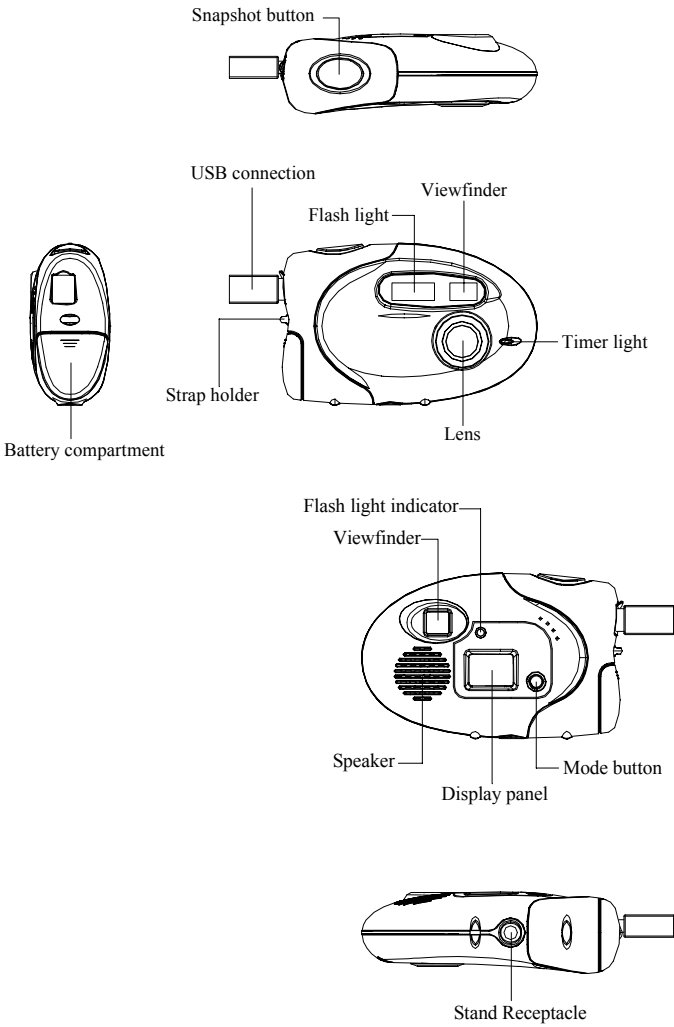



## Software Installation

Please note that you **must** install the software **BEFORE** you connect the camera to the USB port of your computer.

### Step 1: Install Ulead Photo Express

1. Insert the software CD into the CD-ROM drive of your computer.
2. Follow the on-screen instructions to install the software. The software will install automatically.

*Note: If the software does not setup automatically, go to the Taskbar and click **Start**, then click on **Run**, select **Browse** and choose **SETUP.EXE** on the software CD, then click **OK** to install.*

3. The Ulead Photo Express software is loaded when you see the software icon on the screen.


 
**Important: For more information on how to use the software, please refer to the folder named "Manual" on the CD.**

### Step 2 : Install Digital Camera Driver-CamMaestro

In order to use the camera and connect it to your PC, you **must** install the driver named CamMaestro **AFTER** you have installed the Photo Express software in step 1.

1. Follow the on-screen instructions to install the software. The software will install automatically.

*Note: If the software does not setup automatically, go to the Taskbar and click **Start**, then click on **Run**, select **Browse** and choose **SETUP.EXE** on the software CD, then click **OK** to install.*

2. When the setup is finished, you must restart your computer before using the camera. Shut down your PC using the appropriate procedure for your operating system.
- 
- 



## Removing the Camera's Software and Driver

You should only do this if you will no longer be using the Camera.

### To Remove Camera Application Software:

- Step 1: Click **Start** menu (on the left-bottom taskbar).
- Step 2: Move cursor to **Settings** in Start menu and select **Control Panel**.
- Step 3: Click on **Add/Remove Programs** in the Control Panel.
- Step 4: Select **Ulead Photo Express** and click on the **Remove** icon.
- Step 5: Click **Yes** to confirm you want to uninstall.

### To Remove Camera Driver:

- Step 1: Click **Start** menu (on the left-bottom taskbar).
- Step 2: Move cursor to **Settings** in Start menu and select **Control Panel**.
- Step 3: Click on **Add/Remove Programs** in the Control Panel.
- Step 4: Select **CamMaestro** and click on the **Remove** icon.
- Step 5: Click **Yes** to confirm you want to uninstall.




## Getting Started

### Inserting or Replacing the Batteries

***Make sure to power OFF the camera before you change the batteries.***

Slide the compartment cover open and insert/replace the 2 AAA alkaline batteries. After inserting/replacing the batteries, you can immediately use the camera. Always make sure to download pictures before your batteries run out.

***Loss of battery charge may result in loss of stored pictures.***

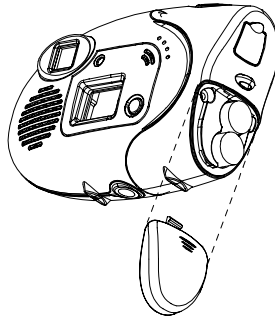

### Connect to PC

If you want the camera to work as a PC camera, or if you want to download pictures to your PC, you simply use the included USB cable to connect the camera to the USB port of your PC. This camera is compatible with NetMeeting and other Windows based Video Conferencing applications.

## Taking a Picture

Mode Button

The display should show a number, it should not be blank or show a symbol. If the screen is blank, press the Mode Button once to turn on the camera. If a symbol is displayed, press the Mode Button until a number appears on the display.

Snapshot

Press Snapshot button once to take one image.



## Camera Display Panel

Here is a list of the icons that appear on the Camera Display Panel. The **Mode** and **Snapshot** buttons can be used with the display to select an option.

Use the **Mode** button to click through the options. When the desired option symbol is displayed, press the **Snapshot** button to select it. For example, to shut off the camera, you would press the **Mode** button one or more times to display **OF** on the LCD Screen. Pressing the **Snapshot** button would shut off the camera.

00 to 99	A number on the display that lets you know how many more pictures can be taken with the current settings of resolution and compression. This number is accurate unless you are in low resolution with compressed mode, where 24 means you have 24,124 or 224 pictures left.
OF	Pressing the Snapshot button will turn the camera off when this is displayed.
FA	Flash strobe ON.
Fo	Flash strobe Off
Ct	Continuous shot. As long as you hold the Snapshot button down, about one picture per second, at the current resolution, will be stored until you run out of memory.
Al	Video recording, AVI file. As long as you hold the Snapshot button down, a video will be recorded at about 15 frames per second until you run out of memory.
St	Self-shot. A picture will be taken automatically about 5 seconds after you press Snapshot to give you time to be in the picture.
CL	Clear the last image you took.
CA	Clear all pictures in the camera memory.
Lr	Low resolution QVGA. For Low resolution mode, you can take up to 82 images in non-compressed mode and up to 246 images in compressed mode.
Hr	High resolution VGA. For High resolution, you can take up to 20 images in non-compressed mode and up to 60 images in compressed mode.
CP	Compressed mode on.
NP	Compressed mode off.





- F5 Select 50Hz to reduce flicker caused by Fluorescent Lights if your local AC power is 50 Hz.
- F6 Select 60Hz to reduce flicker caused by Fluorescent Lights if your local AC power is 60 Hz.
- Lo Battery Low. Please download your pictures from memory to your PC first, and then change the batteries as soon as possible.







## Technical Support

Your first avenue of support should be through the organization that provided you with your Zoom Camera. If you still desire to directly contact Zoom Technical Support, please feel free to do so. For your records, and to facilitate Technical Support from either your equipment supplier or Zoom, please write down the following information when you receive your Zoom Camera.

**Product Name** \_\_\_\_\_

**Product Model Number** \_\_\_\_\_

**Product Serial Number** \_\_\_\_\_

The serial number for the camera is located on the back of the unit below the barcode. Once you have located the serial number, please be sure to write it down. This will greatly speed up your service and ensure that the service representative is addressing the proper model of camera.

### Contacting Zoom by E-mail

You can e-mail Zoom with any tech support questions you have and one of our Technical Support Engineers will respond by e-mail within 2 business days. Send your questions to:

**[www.zoom.com/techmail](http://www.zoom.com/techmail)**

When e-mailing Zoom, be sure to include the following:

- Serial number(s)
- Your full name and mailing address
- A detailed description of your problem.

### Contacting Zoom by Phone

In the U.S. Zoom Support phone lines are open Monday to Friday, 9:00 AM to 11:00 PM Eastern Time. Please call:

**(561) 997-9683**

In the United Kingdom, Zoom Support phone lines are open Monday to Friday, 9:00 AM to 5:00 PM Greenwich Mean Time. Please call:

**+44 (0)1276 704440**

### Return of Defective Units

Please contact your local distributor or reseller for factory-authorized repair or replacement of your in-warranty defective product. If you are unable to reach your distributor, you can contact Zoom Factory Customer Service in the United States by calling:



**(617) 423-2564**

Please note that the customer is responsible for any charges (including brokerage or customs and duties) associated with shipping the defective unit to Zoom for repair. During the first year Zoom will pay return shipping to the customer by common carrier. After the first year the Customer may be required to pay a nominal shipping and handling fee. Any applicable customs, duties and brokerage charges to import the product are the responsibility of the customer. Zoom encourages all customers to return defective units to their respective reseller whenever possible.

## **Limited Warranty**

Zoom Telephonics, Inc. (hereinafter "Zoom") warrants this product against defects in material and workmanship for a period two (2) years from the date of the original end-user purchase. This warranty applies to the original end-user purchaser. For all Zoom products other than software, Zoom will, solely at its option, repair or replace this product with a functionally equivalent new or factory-reconditioned product during the warranty period. The consumer will deliver the product to Zoom. All transportation risks and costs in connection with this warranty service are the responsibility of the consumer.

### **For Software Products supplied by Zoom**

Zoom will replace software at no charge if there is a defect in materials or workmanship for a period of 30 days from date of original retail purchase, provided the defective software is returned to Zoom. Returned shipment will be via U.S. Mail. Software products supplied by Zoom are sold "as is," without warranty, either expressed or implied, as to function, application, merchantability, performance, and quality. Zoom is not responsible for incidental or consequential damages resulting from the breach of any expressed or implied warranty, including any costs of recovering, reprogramming, or reproducing any programs or data stored or used with the Zoom products, damage to property, and to the extent permitted by law, damages for personal injury. This warranty is in lieu of all other warranties, expressed or implied. We do not assume or authorize assumption for use of any other warranty expressed or implied.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusions may not apply to you. This warranty does not apply if the Zoom product has been damaged by accident, abuse, lightning or other natural disasters, misuse or misapplication, or if it has been modified without the written permission of Zoom, or if any serial number has been removed or defaced. This warranty shall not be applicable to the extent that any provisions of this warranty are prohibited by any federal, state, or municipal law that cannot be preempted. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or country to country.



## CE Compliance Statement

Hereby Zoom declares that this modem is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Zoom vakuuttaa täten että modeemi tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart Zoom dat het toestel modem in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG

Bij deze verklaart Zoom dat deze modem voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.

Par la présente Zoom déclare que l'appareil modem est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE

Par la présente, Zoom déclare que ce modem est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables

Härmed intygar Zoom att denna modem står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede Zoom erklærer herved, at følgende udstyr modem overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF

Hiermit erklärt Zoom dass sich modem in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMWi)

Hiermit erklärt Zoom die Übereinstimmung des Gerätes modem mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)

ME THN ΠΑΡΟΥΣΑ ZOOM ΔΗΛΩΝΕΙ ΟΤΙ ΜΟΝΤΕΜ ΣΥΜΜΟΡΦΟΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΟΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK

Con la presente Zoom dichiara che questo modem è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente Zoom declara que el módem cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE

Zoom declara que este modem está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

